


GARMIN®

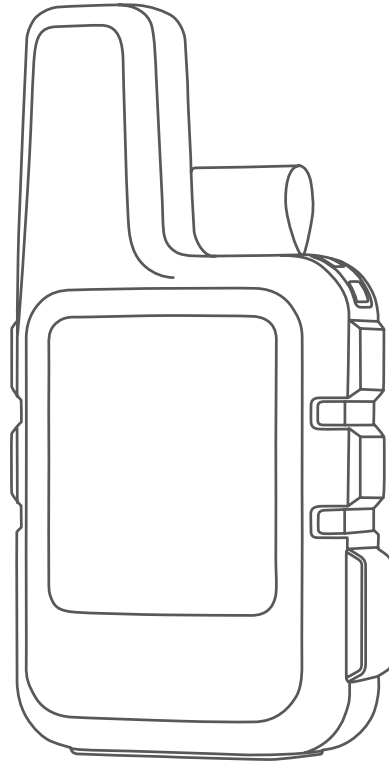

INREACH[®] MINI 2

РЪКОВОДСТВО

© 2022 Garmin Ltd. or its subsidiaries

All rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Go to www.garmin.com for current updates and supplemental information concerning the use of this product.

Garmin®, the Garmin logo, ANT+®, fēnix®, inReach®, and TracBack® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin Explore™, Garmin Express™, and MapShare™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.


The BLUETOOTH® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. Facebook™ and the Facebook logo are trademarks of Facebook and its affiliate companies. Iridium® is a registered trademark of Iridium Satellite LLC. TWITTER™ and the Twitter logo are trademarks of Twitter, Inc. or its affiliates. Other trademarks and trade names are those of their respective owners.

Въведение

 **ВНИМАНИЕ**

Important Safety and Product Information

Първи стъпки

- 1 
- 2
- 3 explore.garmin.com, Garmin Explore™
- 4 Garmin Explore
- 5 Garmin Explore.
- 6

Преглед на устройството



①	Iridium®
②	
③	USB ()
④	SOS ()
⑤	⏻
⑥	

Бутони

▲	
▼	
↶	
	()
⏻	

Включване на устройството



Преглед на главното меню

1

OK,

2



Power Menu

Power



Lock Buttons:

Mute Sounds:

Brightness:

Power Off:

Преглед на Widget Glances

1



2 OK,

3 OK, ()

Widget Glances



Home page:

Activation:

Messages:

Iridium.

Tracking:

Navigation:

Weather:

Check for Messages:

Икони



Активиране на устройството

ВНИМАНИЕ

		inReach	inReach Mini 2,
	, SOS,	inReach Weather,	
1			explore.garmin.com,
2			
3	Activate Now.		
4	:	IMEI	
5			
6	:		Iridium. 20

Сателитна мрежа Iridium

Iridium.

Отстраняване на неизправности

Увеличаване на живота на батерията

-
-
-
- Bluetooth .
- ANT+ .

Нулиране на всички настройки по подразбиране

Garmin

Explore,

- 1 OK,
- 2 **Settings > System > Reset Device.**
- 3 .

Reset Default Settings.

Delete Data and Reset Settings.

Моето устройство е на грешен език

- 1 OK.
- 2
- 3
- 4
- 5

Зареждане на устройството inReach

ЗАБЕЛЕЖКА

USB

1

①



2

②

3

4

5

Спестяване на енергия по време на зареждане на устройството

1

2

3

Спецификации

	-
	1,250 mAh
	IEC 60529 IPX7 ¹
	-20° 60°C
	0° 45°C
/	1.6 GHz @ 31.8 dBm maximum 2.4 GHz @ -5.8 dBm maximum
EU SAR (limb)	0.79 W/kg simultaneous
EU SAR (body)	0.78 W/kg simultaneous

Информация за батерията

Режим	Живот на батерията
10-	: 5
	: 2
10-	: 14
	: 4
30-	: 30
	: 10

